

ZOOM TAC-2 Driver

Installation guide

Copyright(C) 2014 ZOOM Corporation. All Rights Reserved.

- Zoom Corporation will bear no responsibility for losses or claims from third parties that result from the use of this software. Moreover, without our permission, distributing, selling, leasing, renting, altering or reverse engineering of this software is prohibited. Furthermore, the specifications of this software and the contents of this document could be changed without notice in the future.

- Macintosh and Mac OS are trademarks or registered trademarks of Apple Inc.

- Thunderbolt and the Thunderbolt logo are trademarks of Intel Corporation in the U.S. and/or other countries.

Note: All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.

The illustrations in these instructions might differ from actual screens.

1. Supported operating systems

The supported operating systems are as follows.

Mac OS X 10.8.5 (or later)

Important preparations

1) Log in to your Mac using an account with administrator privileges.

2) If any devices are connected to the Mac you are using by Thunderbolt or USB cable, disconnect them all. If any applications are running, quit them all.

2. Introduction

Thank you very much for downloading the ZOOM TAC-2 Driver for the TAC-2 and TAC-2R.

This document explains how to install and update the ZOOM TAC-2 Driver.

To install the ZOOM TAC-2 Driver for the first time, follow the procedures in this section:

[3. Installing the ZOOM TAC-2 Driver](#)

To update the ZOOM TAC-2 Driver after it has already been installed, follow the procedures in this section:

[4. Updating the ZOOM TAC-2 Driver](#)

3. Installing the ZOOM TAC-2 Driver

1. Double-click “ZOOM TAC-2 Driver.pkg” to execute it and follow the instructions to install the application.

This completes installation.


4. Updating the ZOOM TAC-2 Driver

4.1. Check the version

1. Open the Applications folder.
2. Open the Utilities folder.
3. Launch System Information.



4. Select “Extensions” in the “Software” section.
5. Check the version of “ZOOM TBTAudio”.
(On Mac OS X 10.8.x, it will appear as “ZOOM TBTAudio10_8”.)

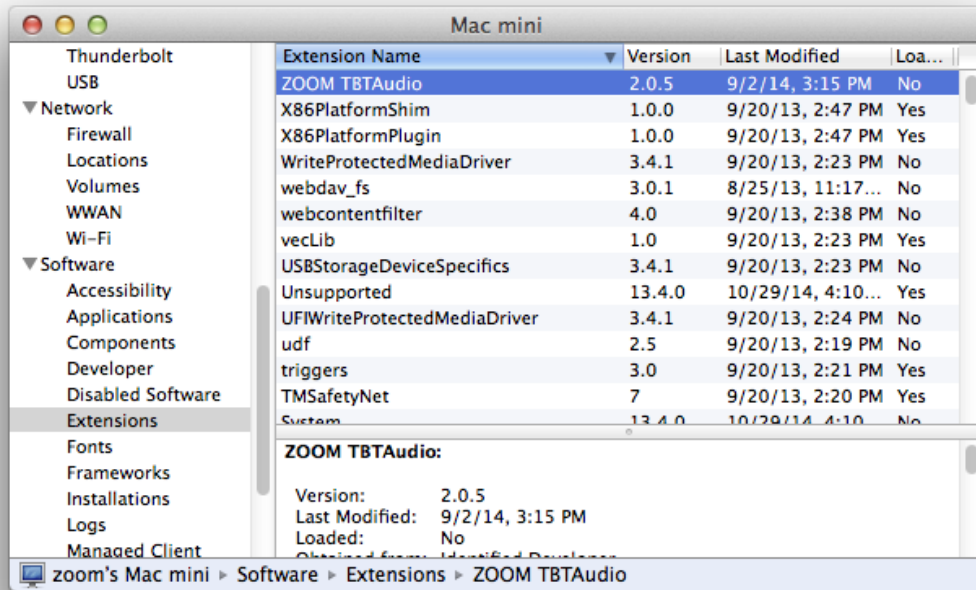

If the Version is 2.0.5 or later, updating is not necessary.

4.2. Uninstalling the ZOOM TAC-2 Driver

1. Double-click “ZOOM TAC-2 Driver Uninstaller” to execute it and follow the instructions to uninstall the application.

4.3. Installing the ZOOM TAC-2 Driver

1. Double-click “ZOOM TAC-2 Driver.pkg” to execute it and follow the instructions to install the application.
2. After installation, confirm that the ZOOM TAC-2 Driver version is 2.0.5.

This completes installation.